
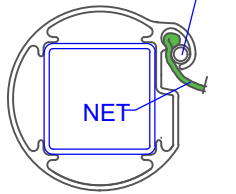
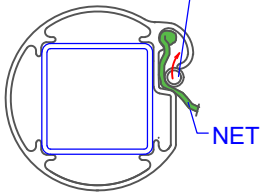






PLACE THE EDGE OF THE NET IN THE BACK OF THE CAVITY

PRESS THE PVC TUBE PAST THE LIP INTO THE CAVITY

PVC TUBE

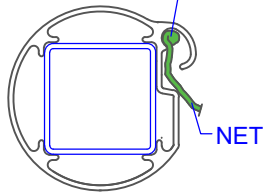

PLACEMENT OF NET INTO THE BAR

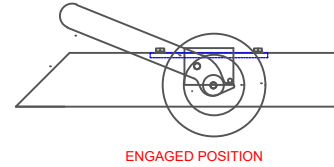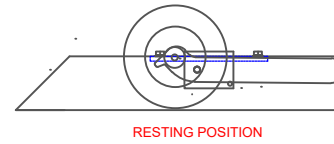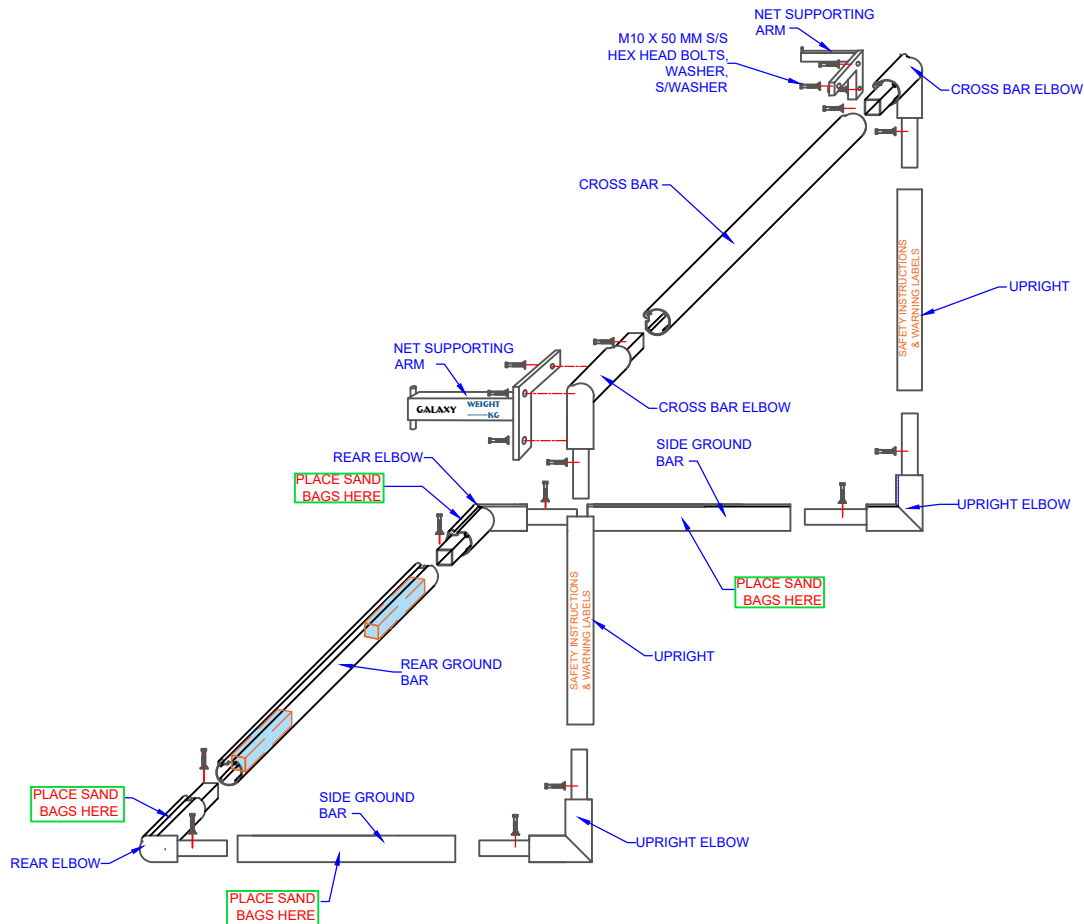

ASSEMBLY INSTRUCTIONS

1. Lay the crossbar and two uprights on the ground.
2. Insert the uprights into the crossbar and bolt together with M10 x 50mm s/s hex head bolts, washers and spring washers. Attach the net support arms with three M10 x 50mm s/s hex head bolts, washers and spring washers.
2. Insert the side ground bars into the ends of the uprights. Secure with M10 x 50mm s/s hex head bolts, washers and spring washers.
3. Insert the rear ground bar into the side ground rails and secure with M10 x 50mm s/s hex head bolts, washers and spring washers.
6. Attach the net to the cross bar and uprights while they are lying on the ground by inserting the net edge into the profile, then pressing the PVC tube under the track curve.
7. Continue to attach the net by pressing the PVC tube under the track curve.
8. Tie the net cord at the top rear of the net to the net rail pins to reduce sag in the net.

COMPONENTS (ONE PAIR)

QTY	ITEM
2	CROSS BAR
4	UPRIGHT BAR
2	NET SUPPORTING ARM-LEFT
2	NET SUPPORTING ARM-RIGHT
4	SIDE GROUND BARS- LEFT AND RIGHT
2	REAR GROUND BAR
4	8 MM PVC TUBE 7500 MM LONG
2	LEFT SIDE WHEEL ASSEMBLY
2	RIGHT SIDE WHEEL ASSEMBLY
36	M10 X 50 MM S/S HEX HEAD BOLT, WASHER & S/WASHER
2	NET 3.0 X 2.0 X 0.8 X 1.5 M
2	LEFT CROSS BAR ELBOW
2	RIGHT CROSS BAR ELBOW
2	LEFT REAR BAR ELBOW
2	RIGHT REAR BAR ELBOW
2	LEFT UPRIGHT BAR ELBOW
2	RIGHT UPRIGHT BAR ELBOW
8	SAND BAGS

TITLE:
GALAXY 32f

DRAWING NUMBER:
Assembly Instruction

DATE: 17/11/2021 DRAWN BY:

CHECKED BY:



Oz Ring Pty Ltd
Trading as:
Play Hard Sports Equipment
ABN 79 066 094 559
24 Ern Harley Drive
Burleigh Heads Qld 4220
Phone: (07) 5593 4494
Fax: (07) 5593 4338
Website: www.playhardsports.com.au
Email: email@playhardsports.com.au